

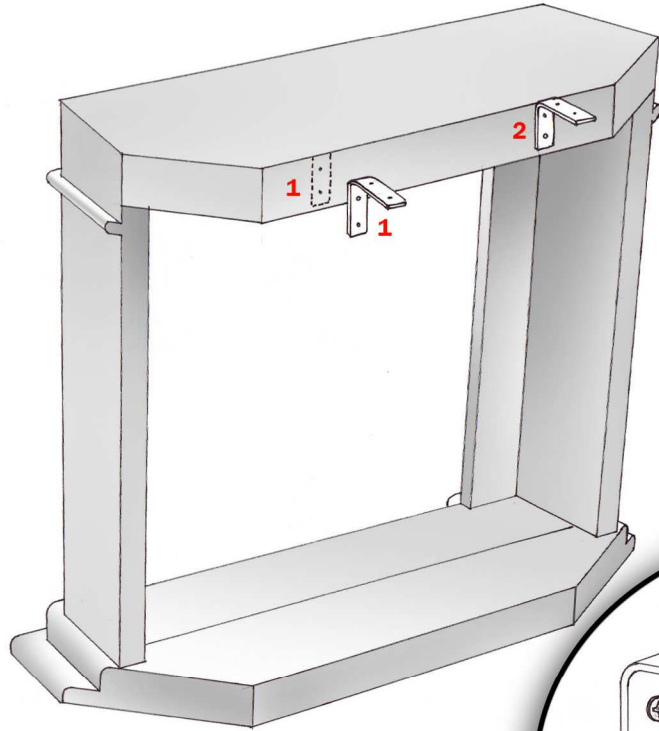


STEP 1

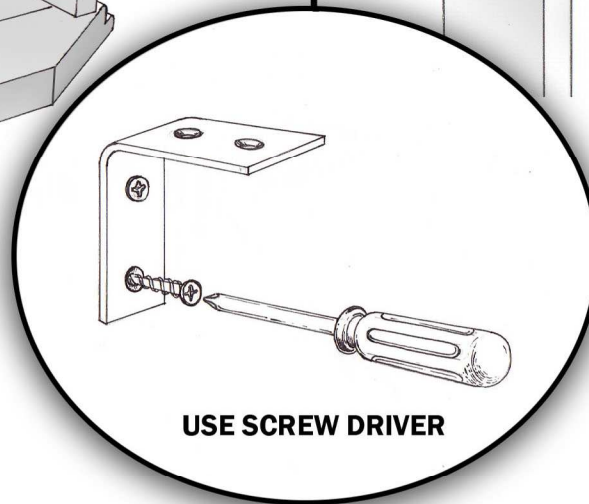


STEP 2

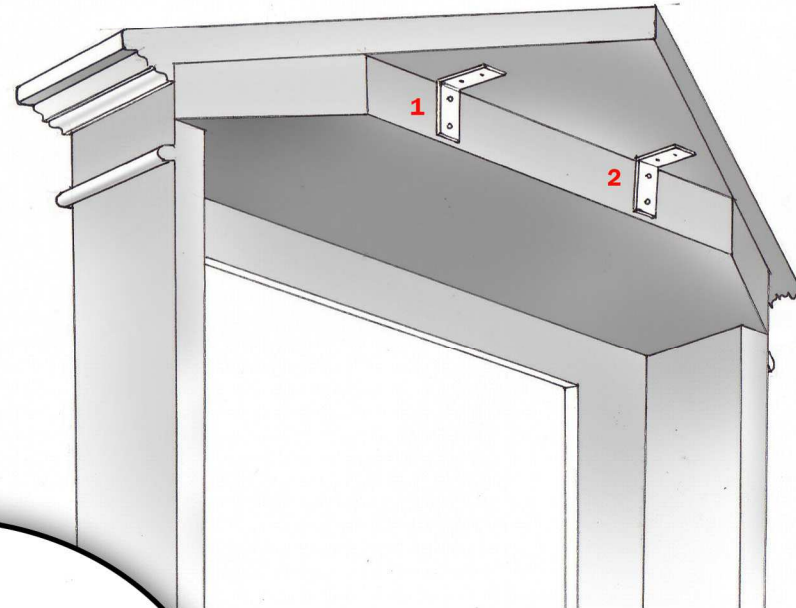


USE SCREW DRIVER

CADIZ CORNER FIREPLACE (*Top Installation*)


Trivero 70

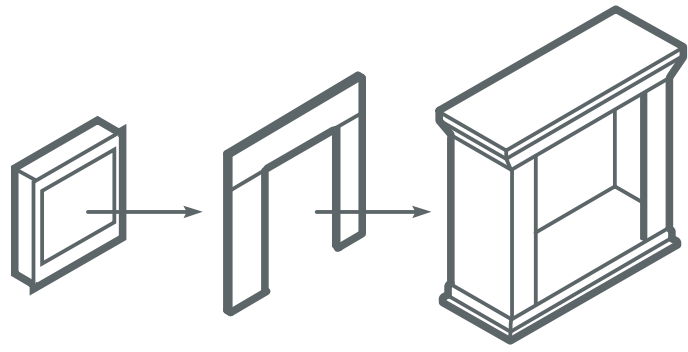

Lucius
Elski
Lagos

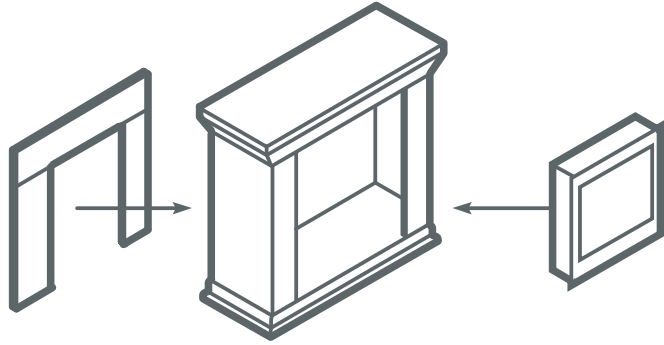

Trivero 70
Trivero 90
Built-in unit L
Built-in unit L with stone decor
Built-in unit L with medallion
Built-in unit Opti-Myst Cassette 600

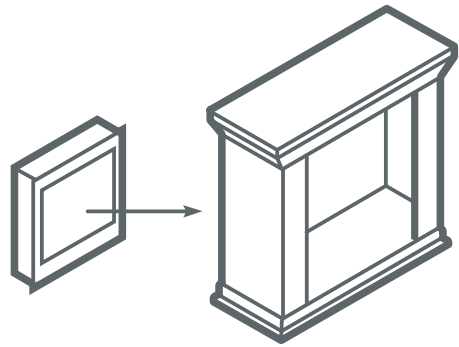


Fossilstone Polished



Fossilstone Unpolished



Stainless steel

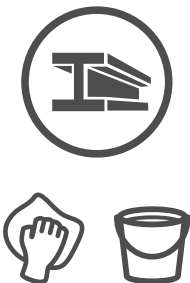

MDF



Concrete look

